


Before starting your installation, please take a few minutes to READ THESE INSTRUCTIONS CAREFULLY. In addition, please check the product CAREFULLY for any visible damage.

Model#: VH60VNGR

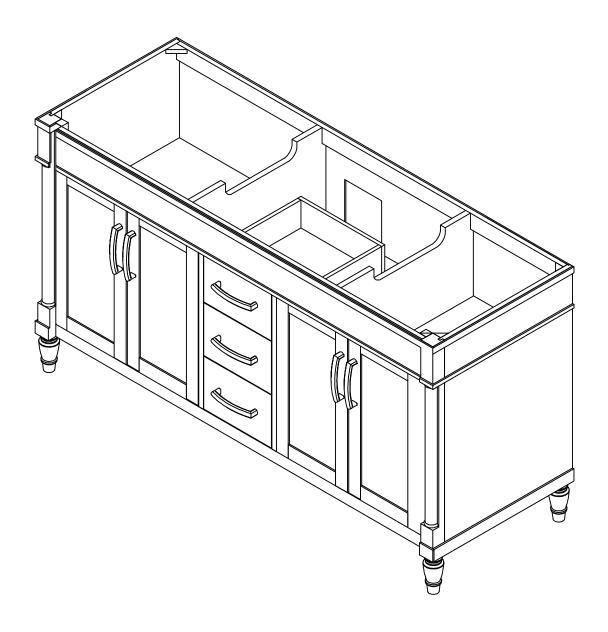




Before starting your installation, please take a few minutes to READ THESE INSTRUCTIONS CAREFULLY. In addition, please check the product CAREFULLY for any visible damage.

Model#: VH60VNGR

PRE-ASSEMBLY

VANITY BODY

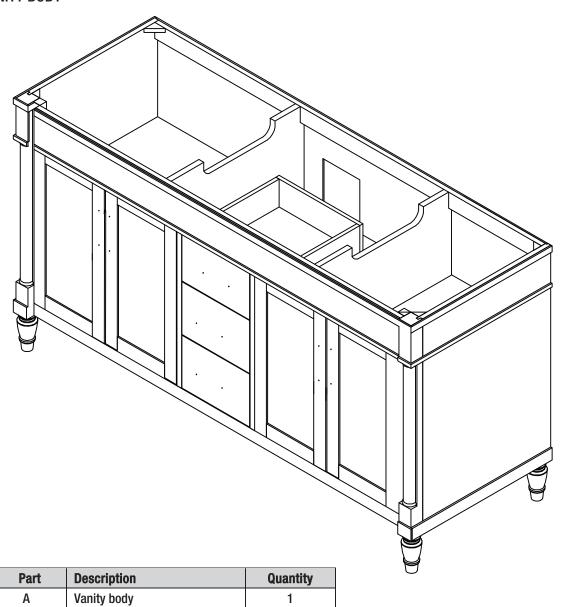



Before starting your installation, please take a few minutes to READ THESE INSTRUCTIONS CAREFULLY. In addition, please check the product CAREFULLY for any visible damage.

Model#: VH60VNGR

TOOLS REQUIRED




NOTE: Tools shown are not included.



HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.

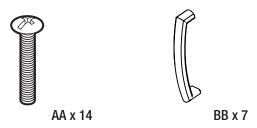


| Part | Description | Quantity |
|------|---------------|----------|
| AA | Handle screws | 14 |
| BB | Door handle | 7 |




Model#: VH60VNGR

Before starting your installation, please take a few minutes to READ THESE INSTRUCTIONS CAREFULLY. In addition, please check the product CAREFULLY for any visible damage.


1 Decide exactly where you wish to install your vanity and gently put it down on the floor.

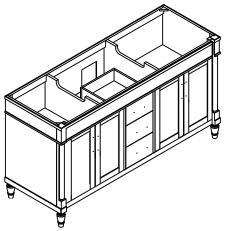


Remove all the handles (BB) from the back of door.

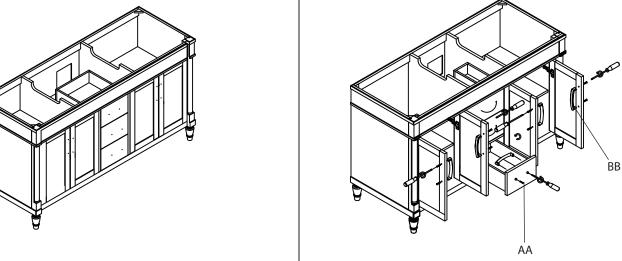

Install the handle on front of the door.

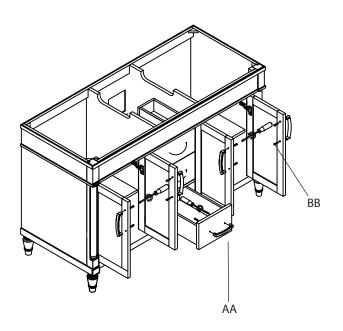

Install the counter top according to counter top instruction manual.

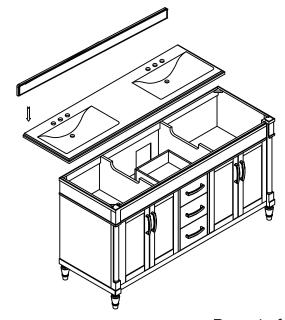



Before starting your installation, please take a few minutes to READ THESE INSTRUCTIONS CAREFULLY. In addition, please check the product CAREFULLY for any visible damage.

Model#: VH60VNGR

CARE AND MAINTENANCE

For best results in cleaning and polishing your bath furniture, we recommend the following:

- □ Dust frequently with a clean, soft, dry, lint-free cloth. Clean the surface by rubbing in the direction of the grain.
- Polish your furniture approximately every six months with a product that contains detergents, emulsifiers and mineral oil. The detergents clean dirt from the furniture; The emulsifiers give it body to clean and last longer; The mineral oil is left behind as barrier for dirt and moisture that can harm the finish. There is no grit to harm the finish, no wax build-up, and no silicone to raise the sheen and act as a barrier for touch-ups and refinishing.
- □ Clean the outside surface with mild soap, warm water, and a soft cloth.
- □ On stubborn stains, use a powdered detergent and damp sponge or nylon scouring pad.
- □ Never use abrasive scouring powders, cleansers, or pads because they will scratch, damage, and dull the surface.

To protect your bath furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight, as sunlight causes fading.
 Clean up spills immediately. Use a blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish.
- □ Alcohol, perfume, aftr-shave and medications can cause severe finish damage.